


# INFORMATIONAL DISPLAY

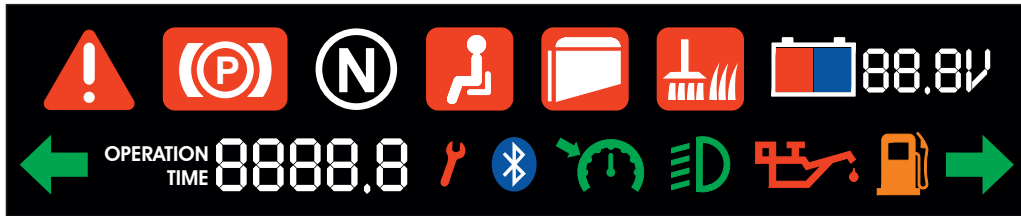

## Warning triangle

shines in case the conditions necessary for the start of the machine are not met. Or when cutting deck is engaged



## Parking brake indicator

shines when the brake pedal is being pressed, or when the brake is locked  
flashing together with shining warning triangle = conditions necessary for the start are not met (press the brake pedal)



## Neutral indicator

flashes together with shining warning triangle = conditions necessary for the start are not met (release the drive pedal)



## Presence of the operator indicator

shines when the operator is not present  
flashes together with shining warning triangle = conditions necessary for the start are not met (sit on the seat)



## Cutting unit indicator

shines when cutting unit is engaged  
flashes together with shining warning triangle = conditions necessary for the start are not met (disengage the cutting unit)  
flashes after cutting deck disengagement = run-out time of disengagement



## Presence and fullness of the grassbox indicator

flashes together with the cutting unit indicator = grassbox is full, cutting unit has been disengaged (function AUT.)  
flashes together with shining warning triangle = conditions necessary for the start are not met (install the grassbox)



## Engine oil pressure indicator

When the engine oil pressure drops, the indicator turns red



## Battery charging\*

The value represents current voltage of the battery.

Indicator:

- is empty = battery is OK (12,6-14V) and is being charged properly
- blue color = the voltage is over 14V, if shines for long period of time, check the charging elements
- red color = low voltage (lower than 12,6V) - check the charging elements of the engine

OPERATION  
TIME 8888.8

## Hourmeter\*\*

Shows the total amount of hours of work

8888.8

## Engine RPM\*\*\*

shows the RPM for 10seconds after the engine start

\* In case that the red light does not go out after about 1 minute of operation after starting the engine and running the machine at maximum speed without the cutting unit engaged and the lights on, or in case the blue light comes on, there is a fault in the charging circuit and it is necessary to seek professional service

\*\* manipulation with the hourmeter (sensor cable on the spark plug) means warranty void

\*\*\* „OPERATION TIME" text is not visible during this period"

## Attention!

if the sensor cable (on the spark plug) is not connected for any reason, the engine will stop after 30 seconds and the display will start flashing. If this happens, you can still use the emergency travel system.